

REFLECTING COLT TRADITION OF FINE CRAFTSMANSHIP SINCE 1836

# COLTEER .22 AUTOLOADER

From its true Western stock with classic straight lines, to its hooded Gold Bead front sight, this carbine combines old and new into a truly fine firearm, deserving of the famous Colt trademark. Its modern, autoloading action gives you the ultimate in a lightweight, easy-handlin' automatic for small game, varmints or just plain plinking. Has American walnut stock and fore-end. Barrel band on fore-end adds to its sporty look. Western style open rear sight adjustable for elevation and windage. Positive crossbolt safety. Weighs just 4½ pounds. Over-all length is 37°. Receiver is grooved for "lipoff" scope mounting. Tubular magazine holds 15.22 Long Rifles, Regular or High Speed. Here's a rifle you'll be proud to own. Made in Hartford. Conn. by Colt craftsmen.



#### **GENERAL OPERATING INSTRUCTIONS**

Ammunition—Shoots all .22 long rifle ammunition, regular or hi-speed.

Safety—The Safety button (40) is located at the rear of the trigger guard (60). Slide Safety button from left to right to lock in "safe" position. Slide Safety button from right to left for "fire" position. When Safety button is in "fire" position, a band of red appears on the button, indicating the rifle is ready to fire.

#### **OPERATION**

To Load—Grasp magazine cap (30) and turn counterclockwise to release. Withdraw inner magazine tube from outer magazine tube until the loading port in outer magazine tube is open. Load from one to 15 cartridges in loading port, then push inner magazine tube back into position and lock.

Chamber may now be loaded by pulling cocking handle (39) to its extreme rear position and allowing it to go forward to closed position. After loading chamber, one more cartridge may be fed into the magazine for full fire load of 16 shots.

The gun may now be fired by pulling the trigger. Only one shot will fire with each pull of the trigger. Trigger must be released and pulled again for each additional shot.

ALWAYS keep Rifle on Safe until you are ready to fire it.

To Unload—Put Rifle on "Safe". Remove inner magazine tube and point muzzle down so that cartridges will slide out of magazine tube. Retract bolt to extract round in chamber. Check magazine throat before closing bolt to make sure there is not an additional cartridge in position to feed into chamber.

Replace inner magazine tube, then open and close the bolt several times while looking in the ejection port to make sure there are no cartridges in the magazine, and that the chamber is empty.

Always treat the rifle as if it were loaded, even when you are sure it is empty.

To Disassemble—Check rifle to make sure it is not loaded. Remove inner magazine tube (32). Remove forearm screw (16) and barrel band screw (35). Slide barrel band off forearm (15). Remove forearm. Drive out pin (61). Pull back cocking handle to extreme rear. With bolt in this position, trigger guard assembly can be removed by pulling out just forward of the trigger guard. Bolt can then be removed by pulling back slightly and the cocking handle and pulling bolt out thru bottom of receiver. Bolt spring assembly (39) may now be removed easily. To function properly, moving parts should be kept clean and free of powder residue and oiled very lightly.

 
We do not recommend disassembly beyond this point, except by qualified persons or gunsmiths.

Do not pull trigger while trigger guard is removed from fille as this puts undue strain on hammer and hammer stop pin. Reassemble rifle by reversing the above procedure.


Sighting—Your rifle has been sighted at the factory to hit point of aim at 50 yards. We recommend that you sight-in your rifle personally to compensate for a possible difference in sighting vision. The rear sight is adjustable for both windage and elevation.


## COMPAR 22 AUTOTODES

WESTERN STYLE STOCK - stock and fore-end made of solid American walnut. REPEATING MECHANISM - a highly reliable semiautomatic repeating mechanism. The ultimate rifle, ideal for small game, varmints or just plain plinking.

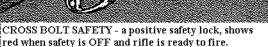


  SIGHTS - Western style open rear sight adjustable for elevation and windage, hooded gold bead front sight. Receiver grooved for "tip-off" scope mounting.

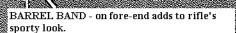

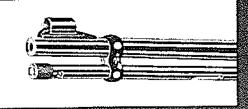


Hooded Gold Bead Sight. Tubular Magazine holds 15 rounds.

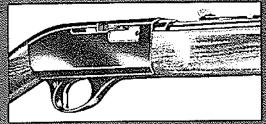

View of automatic repeating mechanism, open rear sight and safety.

To disassemble the Colteer .22 beyond the point described under "General Operating Instructions," the rifle should be brought to a qualified gunsmith, as would be done with any fine firearm.

Under terms of Warranty, Colt responsibility to the owner is limited to the extent that such disassembly be performed only by Colt Custom Repair Department.

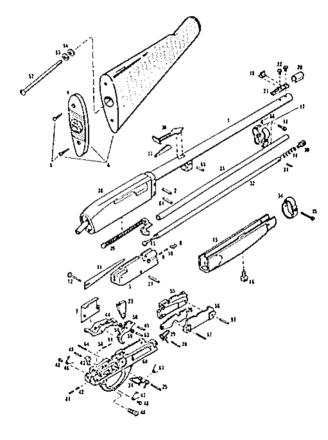

Reference numbers are for illustration purposes only.
Use part numbers when ordering parts.

۲.	HAME OF PART	PART ND.
	Barrel Assembly	8039
	Barrel Relaining Pin	P512:
	Boll	80124
	Bull Plate Butl Plate Screw (2 used)	80081 93501
	Slock	E0914
	[jector Assembly	8027
	Edracher	8086
	Latractor Spring	8018
	Extractor Spring Plunger	6016
	Firing Pin.	6012
	Fining Pin Relaining Pin	9500
	Follower Spring	8012
	Forearm	8034
	Forearm Screw	8013
	Front Band LH.	7011
	Front Band R.H.	7011
	Front Band Screw	8032
	Front Sight Bead	8036
	Frant Sight Hand	8035
	Front Sight Screw	8038 8034
	Hammer.	8012
	Hammer Spring	8013
	Hammer Spring Pin	BO30
	Lifter	8013
	Liller Cam Pin	8514
	Biller Pin.	9500
	Litter Spring. Magazina Tube Cap	6013 8013
	Magazina Tube Cap Pin	9500
	Marazina Tube, Inper	BOT
	Magazina Tube, Inner, Magazine Tube, Oular	603
	Rear Band	7010
	Rear Band Screw	7009
	Rear Sight Leaf. Rear Sight Librator	841
	Receiver	840
	Record Spring Assembly	6024
	Salety	801
	Salety Detent Spring. Spring Detent (2 used) (Sear & Salety)	803
	Spring Detent (2 used) (Sear & Salety)	801
	Sear Sear	808
	Sear Bar Pin	801
	Sear Bar Spring Lit.	803
	Sear Bar Spring R.H.	801 803
	Sear Bar Spring Pin	803
	Sear & Sear Bar Retaining Pin.	803
	Sear Deteril Spring	801
	Spring Delent (2 used) (Sear & Safety)	801
	Stock Bolt Lock Washer	836
	Stock Bolt Wesher	900
	Throat Lil	802 801
	Throat R.H	601
	Threat Put (Z ased)	809
	Trigger Assembly	403
	Trigger Bushing (2 used)	801
	Trigger Guard Trigger Guard Pin	601
	Tripper Pin	603
	Trigger Spring	850 809
	Trigger Stop Pin. Magazine Tube Retaining Pin.	950
	Magazine Tube Retaining Pin,	957
	Barrel Band Ptg	951

### FOR THE FINEST IN SHOOTING EQUIPMENT — OLT since 1836

STAGECOACH .22 AUTOLOADER
This rifle is styled after the heavier caliber carbines
of the old west. Behind this picturesque styling is the newest
semi-automatic repeating mechanism modern technology has
produced. Other features include western style open rear sight,
black walnut stock and fore end, saddle ring and roll engraved
frame. A fast rugged, accurate .22, every inch the outdoorsman's rifle.

COURIER AUTOLOADING RIFLE

.22 Long Rifle, Regular or High Speed. The shooting comfort of a pistol grip type stock and streamlined appearance of a tapered, hand-filling fore-end . . . both of solid walnut, combine to deliver a thoroughly modern .22 autoloader of exceptional reliability. Lightweight . . . 444 pounds. Receiver dovelail grooved for tip-off scope mount. Shoots .22 long rifle, standard or high velocity ammo.

