


OPERATOR'S MANUAL FOR:

Colt King Cobra Target 22LR



Read this manual carefully before loading or using this revolver.



This revolver does not have an external manual safety and will fire if the trigger is pulled with a live round in the chamber.


IMPORTANT

Read this manual and the warnings contained in it before loading or using your Colt's Manufacturing Company LLC ("Colt") King Cobra Target Revolver. This manual explains the function and the handling of your King Cobra Target Revolver and warns of the potential dangers, including death and serious personal injury that can result from the unsafe use of your King Cobra Target Revolver. This manual should always accompany your King Cobra Target Revolver and be transferred with it if it is sold or loaned to another person.

Even if you are an experienced shooter, you must READ THIS ENTIRE MANUAL CAREFULLY before loading or firing your King Cobra Target Revolver. This manual gives basic instructions on the proper handling and functioning of your King Cobra Target Revolver. Your safety and the safety of others depends on you following the instructions and warnings in this manual and the constant use of safe firearms practices. If you are unfamiliar with firearms, take a course in the safe handling of firearms run by a qualified firearms instructor, your local gun club, or a similar qualified organization.

This manual contains several safety warnings and instructions preceded with  **WARNING**,  **CAUTION** or **NOTICE**. These signal words are designed to draw your attention to important safety information.  **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.  **CAUTION** indicates a hazardous situation, which, if not avoided, could result in moderate or minor personal injury. **NOTICE** indicates a hazardous situation, which, if not avoided, could result in property damage.

 **WARNING** Failure to follow the safety information and safety instructions in this manual could result in death, serious personal injury, and/or property damage.

 **WARNING** Always seek a doctor's advice if you are taking medication to be sure that you are able to shoot and handle a firearm safely. Never drink alcoholic beverages or take drugs before or while

SAFETY DEPENDS ON YOU

shooting. Your vision, judgment and motor skills could be seriously impaired, making your firearm handling unsafe.

⚠ WARNING If your King Cobra Target Revolver or any other firearm is carelessly or improperly handled, you could cause a negligent discharge, which could result in death, serious personal injury, and/or property damage.

⚠ WARNING Always handle your King Cobra Target Revolver as if it is loaded so that you never fire negligently.

⚠ WARNING Never point your King Cobra Target Revolver at anything you do not intend to shoot to prevent the risk of death, serious personal injury and/or property damage in the event of a negligent discharge.

⚠ WARNING Never pull the trigger or put your finger on the trigger or in the trigger guard until you have made the decision to fire.

⚠ WARNING Never take anyone's word that a firearm is unloaded; always check for yourself, with the firearm pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge) and your finger off the trigger and outside of the trigger guard.

⚠ WARNING Always make sure your King Cobra Target Revolver is unloaded and that the cylinder open before handing it to another person.

⚠ WARNING Never alter or modify your King Cobra Target Revolver because this could cause it to malfunction and create a dangerous condition.

SAFETY DEPENDS ON YOU

⚠ WARNING If your King Cobra Target Revolver is dropped or forcefully struck, it could be damaged and may not function properly even if you do not see any visual damage. Have it inspected by a competent gunsmith or Colt before continuing to use it.

⚠ WARNING Never carry or handle your King Cobra Target Revolver with a cartridge loaded in the chamber until you are ready to fire it.

⚠ WARNING Always store and transport your King Cobra Target Revolver unloaded and locked in a suitable container, out of the reach and sight of children or other unauthorized persons.

⚠ WARNING Never store or transport ammunition in the same container as your King Cobra Target Revolver.

⚠ WARNING Never leave your King Cobra Target Revolver unattended because it could be obtained by a child or unauthorized person who may use it in an unsafe manner, potentially resulting in death, serious personal injury and/or property damage.

⚠ CAUTION Most ammunition contains lead in the projectile and/or primer. Firing your King Cobra Target Revolver in a poorly ventilated area can lead to the exposure to lead. Always wash your hands after handling ammunition, firing your King Cobra Target Revolver, and/or performing preventive maintenance on your King Cobra Target Revolver to minimize your exposure to lead.

SAFETY DEPENDS ON YOU

Before it left the factory, your King Cobra Target Revolver was tested, carefully inspected, and packaged. Colt cannot control what happens to the revolver after it leaves the factory, therefore, carefully examine your King Cobra Target Revolver when you acquire it to ensure that it is unloaded and undamaged. The dealer will be pleased to assist you in making this examination and endeavor to answer your further questions. If you do not understand any of the warnings and instructions in this manual or have any problems operating your King Cobra Target Revolver, or need another copy of this manual, contact Colt at:

Colt's Manufacturing Company LLC
545 New Park Avenue
West Hartford, CT 06110
Telephone: (800) 962-2658
Website: www.colt.com

The current version of the instruction manual can also be downloaded at www.colt.com

TABLE OF CONTENTS

<u>TITLE</u>	<u>PAGE NO.</u>
Cover	1
Safety Warnings	2-4
Table of Contents	6-7
Illustration of Revolver	8-9
Chapter 1 Characteristics of Revolver	10-16
Chapter 2 Loading	17-23
Chapter 3 Aiming and Firing	24-31
Chapter 4 Clearing Misfires and Bore Obstructions	32-35
Chapter 5 Unloading	36-37
Chapter 6 Maintenance	38-48
Chapter 7 Sights	49-52
Storage	53
Spare Parts	53
Revolver Specifications	54

SAFETY DEPENDS ON YOU

Revolver Record	55
Service Agreement	56
Servicing and Repair	57
Youth Handgun Safety Act Notice	58-61
State and Local Warnings	62-65

SAFETY DEPENDS ON YOU

ILLUSTRATION OF REVOLVER

COLT KING COBRA TARGET REVOLVER



SAFETY DEPENDS ON YOU

ILLUSTRATION OF REVOLVER



CHAPTER 1- CHARACTERISTICS OF REVOLVER

This operator's manual describes the Colt King Cobra Target Revolver and includes information on its features.

The Colt King Cobra Target Revolver is a double/single action revolver. It is chambered in 22LR and comes with a cylinder that holds up to 10 rounds. The King Cobra Target Revolver offers excellent accuracy, balance, and controllability. This revolver utilizes an improved action that features a transfer bar that prevents the firing pin from striking the cartridge until the trigger is squeezed and held back.

FUNCTION:

With a loaded cylinder and a cartridge in the chamber, the revolver will fire a single shot each time the trigger is pulled until all the cartridges in the chambers are fired. To continue to fire the revolver the cylinder will need to be opened and fired cartridges will have to be ejected and new cartridges will have to be loaded into each chamber.


The Colt King Cobra Target Revolver can be fired by Single Action Mode, cocking the hammer manually and then squeezing the trigger to fire, or by Double Action Mode, squeezing the trigger to rotate the cylinder, which cocks and releases the hammer, firing the revolver.

In either mode the functioning sequence is similar. When the trigger or hammer rotates rearward, the trigger unlocks the bolt from the cylinder, while the trigger lifts the hand to rotate the cylinder clockwise, the trigger also moves the transfer bar up behind the firing pin. When the hammer is approximately halfway to its cocked position the bolt is released from the trigger and rides on the outside of the cylinder. The cylinder continues to rotate until the bolt drops into the next cylinder notch assuring proper alignment of the chamber, barrel, and firing pin before the hammer is released. Once the hammer is released from the trigger, it rotates forward striking the transfer bar transferring energy to the firing pin to ignite the cartridge in the chamber. Once the trigger is released, the trigger will rotate back to the at rest position pulling the transfer bar down from behind the firing pin, leaving a gap between the firing

SAFETY DEPENDS ON YOU

pin and hammer. Without the trigger holding the transfer bar up behind the firing pin there is no way for the hammer to contact the transfer bar or firing pin.

Single Action Mode: When the hammer is manually cocked, it will remain cocked until the trigger is squeezed to fire the revolver.

 **WARNING** Do not attempt to holster, carry, or store your revolver with the hammer cocked. Remember to keep the revolver pointed in a safe direction and your finger off the trigger. The revolver will fire if the trigger is pulled.

Double Action Mode: Pulling the trigger rearward rotates both the cylinder and hammer until the trigger releases the hammer allowing it to rotate forward striking the transfer bar, transferring energy to the firing pin to fire the revolver.

OPERATING FEATURES

The operating features section identifies components of the Colt King Cobra Target Revolver and provides a description of their function:

Trigger (Figure 1):

When pulled fires the revolver. Interacts with the hammer, hammer strut, bolt, hand, and transfer bar.

Sights (Figures 1 & 2):


The sights are used to align the revolver with the target. The rear sight is located on the top strap of the frame and is adjustable for elevation and windage. The interchangeable fixed front sight is located on the front of the barrel.

Hammer (Figures 1 & 4)

When released from a cocked position, in either double action or single action mode, rotates to hit the transfer bar. Transferring energy to the pin firing pin to ignite the cartridge.



Do not attempt to close or forcibly slam the cylinder into the frame with the hammer cocked, as you could damage the mechanism.



Do not attempt to force the cylinder open with the hammer cocked, doing so could damage the revolver mechanism.

Transfer Bar (Figure 3)

Is a safety mechanism. When it is being held up behind the firing pin and the hammer is released, the hammer hits the transfer bar transferring energy to the firing pin to ignite the cartridge in the chamber. Without the trigger being held in the firing position, the transfer bar is not held up behind the firing pin. This creates a space between the hammer and firing pin, preventing the hammer from striking the firing pin until the trigger is squeezed and held back. The revolver will not fire provided the trigger is not in the firing position.

OPERATING FEATURES (Cont.)

Hand


Rotates the cylinder to align the chamber with the barrel and firing pin. It serves also as a safety device preventing the cylinder from being opened or closed while the hammer is in the cocked position.

Barrel (Figures 1 & 2):

The barrel is rifled, which imparts a stabilizing spin to the bullet so that it will follow a more accurate flight path to the target once the cartridge is fired.

Cylinder (Figure 1 & 2):

Contains ten chambers for loading of up to ten cartridges.



WARNING Forcing damaged ammunition into the cylinder chambers could damage your revolver and could result in injury, death, or damage to property.

Ejector Rod & Ratchet (Figure 1):

Provides a means to eject cartridges (fired or unfired) from the cylinder.

Cylinder Latch (Figure 1):

Locks the cylinder into the frame. When pulled rearward it allows the cylinder to be opened to the left side of the revolver for loading and unloading of cartridges.

OPERATING FEATURES (Cont.)

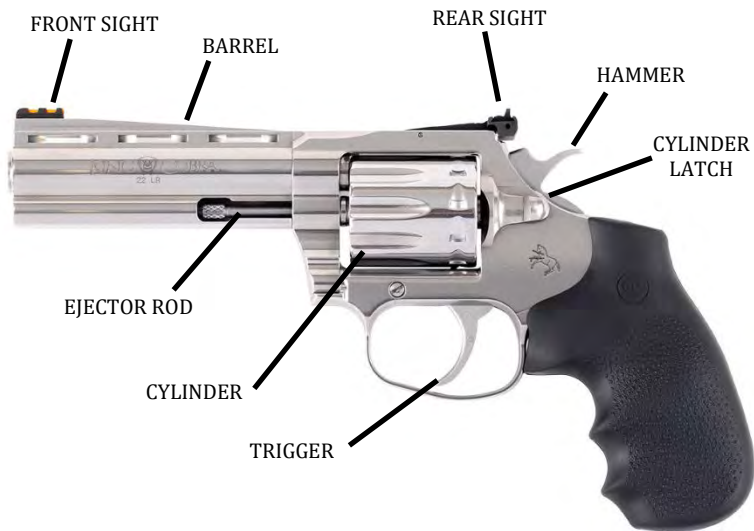


Figure 1

SAFETY DEPENDS ON YOU

OPERATING FEATURES (Cont.)

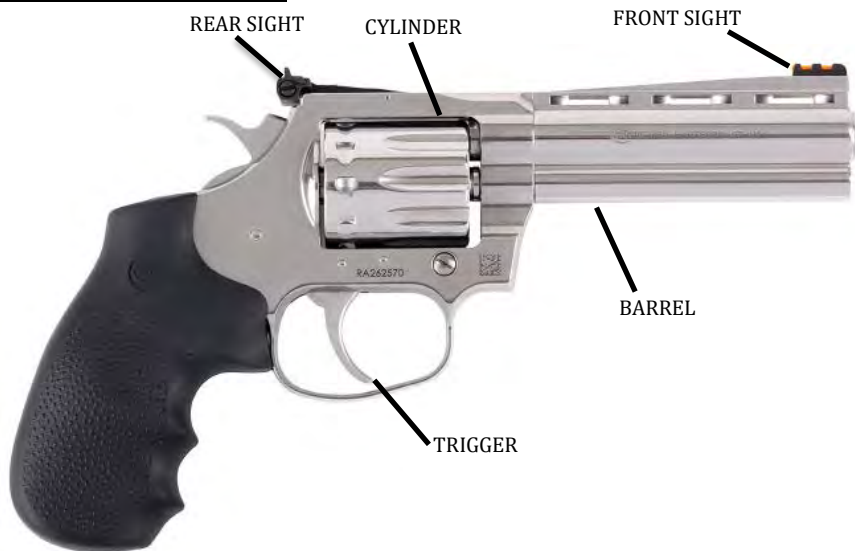


Figure 2

OPERATING FEATURES (Cont.)

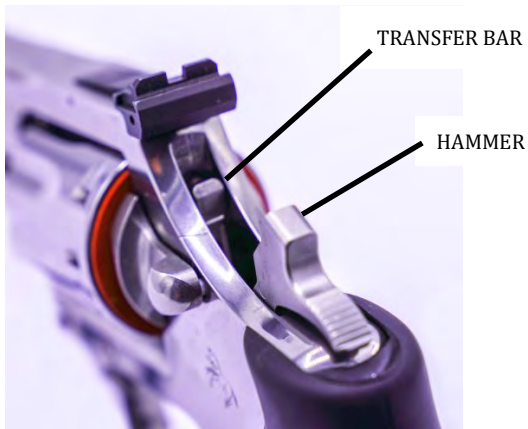


Figure 3

CHAPTER 2- LOADING

⚠ WARNING This revolver does not have an external manual safety and will fire if the trigger is pulled with a live round in the chamber.

⚠ WARNING Use of improper ammunition could cause death, serious personal injury, and/or property damage. Only use high quality commercially manufactured ammunition that meets SAAMI, CIP, or NATO standards.

⚠ WARNING Do not use reloaded, remanufactured, and/or handloaded ammunition because it may not meet applicable SAAMI, CIP or NATO standards and could cause death, serious personal injury and/or property damage.

⚠ WARNING Always inspect ammunition before using it. Never use dirty, corroded, or damaged ammunition because it could generate excessive pressure and possibly cause the barrel to burst resulting in death, serious personal injury, and/or property damage.

⚠ WARNING Only use the specific type and caliber of ammunition for which your firearm is chambered. Use of the incorrect type and caliber of ammunition could generate excessive pressure potentially causing the barrel to burst resulting in death, serious personal injury, and/or property damage.

⚠ WARNING To minimize the risk of a negligent discharge, do not load your King Cobra Target Revolver until you are ready to fire it.

⚠ WARNING Always keep your finger off the trigger and outside the trigger guard and the muzzle pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge) when loading the revolver to minimize the risk of a negligent discharge.

SAFETY DEPENDS ON YOU

NOTICE Do not attempt to forcibly close the cylinder because this could result in damage to your revolver. The cylinder should close and lock into battery without binding or excessive force.

AMMUNITION SELECTION:

The King Cobra Target Revolver is chambered to fire 22 LR ammunition, which is also known as 22 Long Rifle Sporting. 22 Long Rifle Match and 22 Long Rifle Shot ammunition can also be fired safely from this revolver. The cartridge designation is located on the barrel of the revolver (Figure 4). This indicates the correct ammunition that must be used in the revolver.



Figure 4

Your King Cobra Target Revolver is designed to function with a variety of brands and types of factory manufactured 22 LR ammunition, but not all ammunition will provide the same results. It is recommended that you go to the range and fire different ammunition. Once you find the ammunition that functions best, keep using it. Do not use ammunition that has any indications of damage to the cartridge or bullet.

LOADING

LOADING THE REVOLVER:

1. Keep your finger off the trigger and outside of the trigger guard (Figure 5).
2. Make sure that the hammer is not cocked.
3. Open the cylinder by pulling the cylinder latch to the rear and push the cylinder out to the left side of the revolver (Figure 6).
4. With the cylinder open, check all ten chambers to ensure that they are clean and unobstructed (Figure 6).
5. Insert a round of ammunition into each chamber, making sure to fully seat each cartridge (Figure 7).
6. Push the cylinder into the frame until the cylinder latch moves forward into its closed position. Rotate the cylinder if necessary to ensure that the bolt is engaged with the cylinder preventing free rotation of the cylinder (Figure 8).

NOTICE Depending on the position of the cylinder when first pushed into the frame, it is sometimes possible that the bolt will not engage the cylinder to lock it. Check for proper bolt engagement by attempting to rotate the cylinder clockwise by hand. If the bolt is engaged properly the cylinder will not rotate. If the cylinder rotates, rotate it until the bolt engages the cylinder and prevents further rotation.

7. The revolver is now loaded.

⚠ WARNING The revolver is now loaded with ammunition in the chambers and will fire if the trigger is pulled.

⚠ WARNING Never leave a loaded revolver unattended.



Figure 5

LOADING (Cont.)



Figure 6

LOADING (Cont.)



Figure 7

LOADING (Cont.)



Figure 8

CHAPTER 3- AIMING AND FIRING

⚠ WARNING Always be sure that the barrel of your King Cobra Target Revolver is clear of obstructions before firing it. Remove any obstructions pursuant to the instructions for clearing barrel obstructions in Chapter 4, before firing your King Cobra Target Revolver so that it will function safely and correctly. Any obstruction in the barrel could prevent the revolver from firing properly and cause the barrel to bulge or burst resulting in death, serious personal injury and/or property damage.

⚠ WARNING In case of a failure to fire, continue to hold your King Cobra Target Revolver pointed towards the target or in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge) for at least two minutes. If a hang fire (slow ignition) has occurred, the cartridge should fire within approximately two minutes. If the cartridge has not fired within two minutes, remove the cartridge from your King Cobra Target Revolver by opening the cylinder with the revolver still pointed in a safe direction and the eject the cartridge from the chamber and examine its primer. If the firing pin indentation is light or nonexistent, stop using your King Cobra Target Revolver and have it examined by a qualified gunsmith or Colt. If the firing pin indentation on the primer appears normal (compared to similar previously fired cartridges), the cartridge may be defective. Separate the cartridge from other live ammunition and empty cases, reload your King Cobra Target Revolver and resume firing. (Note: Dispose of misfired cartridges in accordance with the ammunition manufacturer's instructions.).

⚠ WARNING If a noticeable difference in sound or recoil is experienced, it could mean that a cartridge fired without enough energy for the bullet to exit the barrel. Make sure that the barrel is not obstructed before continuing to fire your King Cobra Target Revolver.

⚠ WARNING Never use your King Cobra Target Revolver if it fails to function properly, and never force the cylinder closed on a jammed cartridge because it could cause the cartridge to explode.

⚠ WARNING If you have difficulty in, or feel unusual resistance in, chambering a cartridge, or find unburned grains of propellant powder in the firing mechanism, make sure that the barrel is not obstructed before continuing to use your King Cobra Target Revolver.

AIMING AND FIRING (Cont.)

⚠ WARNING Always wear safety glasses when firing your King Cobra Target Revolver, to protect your eyes, and make sure that anyone nearby is also wearing safety glasses to protect their eyes.

⚠ WARNING Always wear ear protection when firing your King Cobra Target Revolver, to protect your hearing, and make sure that anyone nearby is also wearing ear protection to protect their hearing.

⚠ WARNING Always be sure that your backstop is adequate to stop and contain bullets before firing so that you do not hit anything outside of the shooting range area. A bullet could travel through or past your target for more than three miles. If in doubt, do not shoot.

⚠ WARNING Never shoot at a hard surface, such as a rock, or a liquid surface, such as water, because a bullet could ricochet and travel in any direction, striking you or someone else.

⚠ WARNING Never discharge a firearm near flammable material. Flames and sparks are emitted from a firearm when it is discharged, which could ignite flammable materials, or cause gasses to explode.


⚠ WARNING Always put a responsible and competent person in charge to maintain safety, discipline and control when a group is firing at a range, to reduce the likelihood of a negligent discharge.

⚠ WARNING Always carry your King Cobra Target Revolver unloaded while on a range until preparing to fire. Always keep your King Cobra Target Revolver pointed towards the backstop when loading, firing and unloading it.

⚠ CAUTION Never touch the barrel immediately after firing because it may be hot and could cause burns.

⚠ CAUTION Never fire your King Cobra Target Revolver near an animal unless it is trained to accept that noise. An animal's startled reaction could injure it or cause it to injure you or someone else.

AIMING AND FIRING (Cont.)



WARNING Always keep your fingers and other body parts away from the gap between the cylinder and barre of the revolver. Failure to do so risks injury from hot gasses and other debris when firing the revolver (Figure X).

AIMING and FIRING INSTRUCTION:

When the revolver is loaded, with cartridges in the chambers it can be fired through the following steps:

1. While keeping the muzzle pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge), grip the revolver using a two-hand hold, keeping your finger off the trigger and outside of the trigger guard. Never extend your fingers beyond the front of the cylinder when firing a revolver (Figure 9).



Figure 9

AIMING AND FIRING (Cont.)

2. Take aim by aligning the target with the front and rear sights.
3. There are two ways to fire your revolver:
 - a. Double Action Mode- After aligning the target and sights, squeeze the trigger fully rearward until it cocks and releases the hammer to fire the revolver. To fire the second and subsequent rounds, release the trigger fully and squeeze it again to cock and release the hammer. Repeat until you have completed firing, then remove finger from inside the trigger guard (Figure 10).

NOTICE Trigger must be fully returned forward before squeezing it again. Failure to do so can prevent the action from fully cycling and will prevent you from being able to fire the next shot.



Figure 10

AIMING AND FIRING (Cont.)

- b. Single Action Mode- After aligning the target and sights, with finger outside the trigger guard, draw the hammer fully back to the cocked position (Figure 11) where it will be held by the sear. Remove thumb or finger from hammer spur and place finger inside trigger guard and gently squeeze trigger until the hammer falls. Repeat procedure until you have completed firing.

NOTICE Trigger travel and pressure is significantly less in single action mode to fire the revolver. It is your responsibility to exercise care in handling the revolver when firing in single action mode



Figure 11

AIMING AND FIRING (Cont.)

NOTICE If you decide to not fire the revolver from the cocked single action position, then lower the hammer as follows:

- c. With your fingers off the trigger and outside the trigger guard, place the thumb of your free hand between the hammer and frame of the revolver to prevent the hammer from moving fully forward (Figure 12).
- d. Place the thumb of your firing hand firmly on the hammer spur. You must control the hammer with your thumb. If you lose control of the hammer and it slips while the trigger is being held back the revolver will fire (Figure 12).
- e. While controlling the hammer gently squeeze the trigger to allow the hammer to move forward out of its cocked position.
- f. Release the trigger completely and remove your finger from the trigger guard before lowering the hammer to its uncocked (at rest) position (Figure 13)

WARNING Failure to remove your finger from the trigger guard as soon as the hammer is out of its cocked position could cause the revolver to fire if your thumb slips off the hammer spur.

When you are finished firing, unload the revolver, and store it in a secure location.

WARNING Never leave a loaded and cocked revolver unattended. Only cock the hammer into single action when you are ready to fire the revolver.

AIMING AND FIRING (Cont.)



Figure 12

AIMING AND FIRING (Cont.)



Figure 13

CHAPTER 4- CLEARING MISFIRES AND BORE OBSTRUCTIONS

⚠ WARNING If an unfired cartridge hangs up, jams or binds while being chambered, do not attempt to force it into the chamber by pushing or striking it, because this could cause the cartridge to burst resulting in fragments of the cartridge flying out of the cylinder with sufficient force to cause death, serious personal injury, and/or property damage.

⚠ WARNING If a noticeable difference in sound or recoil is experienced, it could mean that a cartridge fired without enough energy for the bullet to exit the barrel. Make sure that the barrel is not obstructed before continuing to use your King Cobra Target Revolver.

⚠ WARNING If a bullet is stuck in the barrel, never attempt to shoot it out using another cartridge or to blow it out using a blank because doing so can generate excessive pressure potentially causing the revolver to burst resulting in death, serious personal injury, and/or property damage.

⚠ WARNING Always be sure that the barrel of your King Cobra Target Revolver is clear of obstructions before firing it. Remove any obstructions pursuant to the instructions for clearing barrel obstructions in Chapter 4, before firing your King Cobra Target Revolver so that it will function safely and correctly. Any obstruction in the barrel could prevent the revolver from firing properly and cause the barrel or cylinder to bulge or burst resulting in death, serious personal injury and/or property damage.

⚠ WARNING Never use your King Cobra Target Revolver if it fails to function properly, and never force the cylinder closed on a jammed cartridge because it could cause the cartridge to explode resulting in death, serious personal injury and/or property damage.

⚠ WARNING Always wear safety glasses when attempting to remove a jammed cartridge to protect your eyes.

MISFIRE

A misfire is a failure to fire when the hammer falls on a live cartridge because of a faulty cartridge, a dirty chamber that does not allow the cartridge to be properly seated, or a malfunction in the firing mechanism. Although misfires are rarely encountered with properly maintained revolvers and factory ammunition, misfires are potentially dangerous.

In case of a misfire, keep the muzzle pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge) for two minutes with the revolver closed. This will avoid having the cartridge explode due to a slow burning primer when ejected, which could result in death, serious personal injury, and/or property damage. After waiting two minutes unload the revolver as described in Chapter 5. Examine the unfired cartridge; if the firing pin indent appears normal, assume the misfire is the result of faulty ammunition, load another cartridge, and continue to fire. If the firing pin indent is light, misaligned, or nonexistent, check that the chamber is clean and that the cartridge is seated properly when closing the cylinder. Load another cartridge and fire the revolver. If another misfire occurs, have your revolver examined by a competent gunsmith or return it to Colt for service.

Note: Dispose of any misfired cartridges in accordance with the ammunition manufacturer's instructions.

BORE OBSTRUCTIONS

If water, snow, mud, sand, etc., gets into the barrel, it must be removed before you fire your revolver. To remove these materials from your barrel, follow the instructions below:

1. While keeping the muzzle pointed in a safe direction and your finger off the trigger and outside of the trigger guard, open the cylinder and unload the revolver.
2. While holding the revolver with the muzzle facing down with the cylinder open, vigorously shake the revolver to remove the obstruction from the barrel.
3. If the bore obstruction remains after vigorously shaking the revolver, a cleaning rod may be used to clear the bore obstruction.
4. Before using your revolver again, it **MUST** be cleaned and lubricated pursuant to the instructions in Chapter 6.

Note: Clean and lubricate the revolver as soon as possible after clearing any obstruction from the barrel to ensure that all obstructions have been removed and to prevent potential corrosion.

BULLET IN BARREL

If a noticeable difference in sound or recoil is experienced, or if there is any reason to suspect that a bullet is stuck in the barrel, immediately stop firing the revolver and check to see if a bullet is stuck in the barrel using the following steps:

1. While keeping the muzzle pointed in a safe direction and your finger off of the trigger and outside of the trigger guard open the cylinder and unload the revolver.
2. While holding the revolver with the muzzle facing down and cylinder open, ensure that the chambers are all unloaded, both visually and physically (with you finger).
3. Look into the barrel bore. Note: A bullet may be lodged down the barrel away from the chamber and may not be easily seen.
4. If a bullet is stuck in the barrel, bring the revolver to a competent gunsmith to have the bullet removed.

CHAPTER 5- UNLOADING

⚠ WARNING Always keep the muzzle pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge) and your finger off the trigger and outside of the trigger guard when unloading your King Cobra Target Revolver to avoid a negligent discharge which could result in death, serious personal injury and/or property damage.

⚠ WARNING Always unload your King Cobra Target Revolver immediately after use and before storing it to minimize the risk of a negligent discharge which could result in death, serious personal injury and/or property damage.

To unload your King Cobra Target Revolver, follow the instructions below. To ensure that your King Cobra Target Revolver is unloaded, you **MUST** proceed in this order.

1. Keep with your finger off the trigger and outside of the trigger guard, ensure that the hammer is not cocked.
2. Open the cylinder by pulling the cylinder latch to the rear and push the cylinder out to the left side of the revolver.
3. With the cylinder open, push the ejector rod rearwards forcing out all of the loaded cartridges (Figure 14). With the cartridges clear of the chambers remove them from the revolver. Allow ejector rod to return to its seated position in the cylinder.

NOTICE The ejector rod spring should return the ejector rod/ratchet to its seated position under its own force.

4. With the hammer still in the uncocked position, push the cylinder into the frame until the cylinder latch moves forward into its closed position.
5. After pushing cylinder into frame, the cylinder should be rotated until the bolt engages the cylinder.

UNLOADING (Cont.)

6. After you have unloaded your King Cobra Target Revolver, collect any live ammunition for safe storage and properly dispose of any spent cartridge cases.

WARNING Do not attempt to close the cylinder with the hammer cocked. Do not swing or slam the cylinder forcibly into place with the hammer cocked. Doing any of these actions could damage the revolver mechanism.

WARNING Revolver is clear only when all chambers are empty, and the hammer is in the uncocked position. If the revolver is carelessly or improperly handled, an accidental discharge could result and could cause serious injury, death, or damage to property.



Figure 14

CHAPTER 6- MAINTENANCE

WARNING

Always be sure that the barrel of your King Cobra Target Revolver is clear of obstructions before firing it. Remove any obstructions before firing your King Cobra Target Revolver so that it will function safely and correctly. Any obstruction in the barrel could prevent the revolver from firing properly and result in death, serious personal injury, and/or damage to your King Cobra Target Revolver.

WARNING

Always wear safety glasses when cleaning your King Cobra Target Revolver to protect your eyes from cleaning materials.

WARNING

Many gun solvents and cleaners are highly flammable. Ensure that there are no open flames in the area in which you are cleaning your King Cobra Target Revolver to avoid serious personal injury from burns.

WARNING

Always make sure that no ammunition is located in the area where you clean your King Cobra Target Revolver. Cleaning solvents can affect the primer and powder in ammunition and cause it to malfunction. This could result in a bullet being pushed into the barrel of your King Cobra Target Revolver and getting stuck. Firing another round with a bullet stuck in the barrel could cause the barrel to burst and result in death, serious personal injury, and/or damage to your King Cobra Target Revolver.

NOTICE

Only use commercially available gun solvent and gun oil or cleaner-lubricant-preservative. Use of improper cleaning fluids could damage your King Cobra Target Revolver.

NOTICE

If your King Cobra Target Revolver has been coated with a decorative finish, the best way to care for and maintain the longevity of the decorative finish is to use a clean and soft cloth dampened with water and gently wiping the decorative finish. Decorative finishes are susceptible to damage from certain chemicals and abrasive surfaces. Do not use solvents, paint thinners, or gun cleaning products

SAFETY DEPENDS ON YOU

to clean the decorative finish. Do not store your King Cobra Target Revolver with lubricants or oils on the decorative finish because this will weaken the outer protective coating of the decorative finish.

Maintenance instructions tell the operator how to clean and lubricate the King Cobra Target Revolver. Like any other precision mechanism, your revolver will perform better, last longer, and remain safer when it is properly maintained. Follow the instructions in this section to keep your King Cobra Target Revolver in good condition.

WHEN TO CLEAN:

After Firing: Clean your revolver as soon as possible. This will lessen the opportunity for corrosion to start.

Periodically: It is suggested that you clean your revolver when necessary and at least once or twice a year in a temperate climate, or even as often as once a week in a tropical climate. If you get your revolver wet, clean it as soon as possible. If the revolver has been used in salt air, or water, mud, or sand, etc., have gotten into its internal operating parts, it should be completely disassembled, cleaned, and inspected by a competent gunsmith or returned to Colt for service.

MATERIALS NEEDED

Tools Required: Cleaning kit for 22 LR revolvers containing a cleaning rod, bore brush, patch holder (jag), and a small nylon bristle brush.

Materials Required: Bore patches, lint free cloth, and either cleaner-lubricant-preservative such as Break-Free® CLP, or good quality gun solvent and gun oil.

CLEANING

To clean your unloaded King Cobra Target Revolver, first unload it pursuant to the instructions in Chapter 5 and then clean it according to the instructions below.

BARREL: Clean the barrel as follows:

1. Open the cylinder prior to cleaning the barrel.
2. Wet a cleaning patch with cleaner-lubricant-preservative or gun cleaning solvent and run it through the barrel, from the chamber end, several times using a cleaning rod.
3. Wet a bristled bore brush with cleaner-lubricant-preservative or gun cleaning solvent and run it back and forth in the barrel, from the chamber end, using a cleaning rod.
4. Wet a new cleaning patch with cleaner-lubricant-preservative or gun oil and run it through the barrel once, from the chamber end, with the cleaning rod and examine it. If it is not clean, repeat steps two and three until the patch remains clean after being run through the barrel.
5. Wet a small bristled brush with cleaner-lubricant-preservative or gun cleaning solvent and run it back and forth to clean the rear face of the barrel.
6. Before firing your King Cobra Target, run a clean patch through the barrel, from the chamber end, using the cleaning rod. Repeat this procedure until the patch comes out of the barrel with no gun oil or cleaner-lubricant-preservative on it. (Note: If you will be storing your King Cobra Target revolver, do not perform step 4 until you are ready to use it).

CLEANING (Cont.)

CYLINDER: Clean the cylinder as follows:

1. Wet a cleaning patch with cleaner-lubricant-preserved or gun cleaning solvent and run it through all the chambers of the cylinder, from the chamber end, several times using a cleaning rod.
2. Wet a bristled bore brush with cleaner-lubricant-preserved or gun cleaning solvent and run it back and forth in each chamber of the cylinder, from the chamber end, using a cleaning rod.
3. Wet a new cleaning patch with cleaner-lubricant-preserved or gun oil and run it through each chamber once, from the chamber end, with the cleaning rod and examine it. If it is not clean, repeat steps two and three until the patch remains clean after being run through the barrel.
4. Wet a bristled brush with cleaner-lubricant-preserved or gun cleaning solvent and run it back and forth to clean the front face of the cylinder.
5. With the cylinder open clean the back of the crane area. Wet a bristled brush with cleaner-lubricant-preserved or gun cleaning solvent and run it back and forth to clean the back surface of the crane and the crane cut in the frame.
5. Wet a bristled brush with cleaner-lubricant-preserved or gun cleaning solvent and run it back and forth to clean the rear face of the cylinder and ratchet. Then push the ejector rod rearward and clean under the ratchet head.

CLEANING (Cont.)

6. Before firing your King Cobra Target, run a clean patch through the chamber, from the chamber end, using the cleaning rod. Repeat this procedure until the patch comes out of each chamber with no gun oil or cleaner-lubricant-preserved on it. (Note: If you will be storing your King Cobra Target revolver, do not perform step 6 until you are ready to use it).

FRAME ASSEMBLY: Clean the frame as follows:

1. Clean all exposed surfaces of the frame, sideplate, crane, hammer, trigger, and grips, using the nylon bristle brush or a clean cloth that has been slightly dampened with cleaner-lubricant-preserved or gun cleaning solvent.
2. Wipe all exposed areas of the frame assembly with a clean cloth and examine it. If it is not clean, repeat steps one and two until the patch remains clean.

LUBRICATION

After you have cleaned your King Cobra Target Revolver, lubricate it as follows (Figures 15, 16, 17, & 18 indicate the areas to be lubricated):

1. Lightly lubricate the outside surfaces of the barrel, cylinder, and frame, with cleaner-lubricant-preservative or gun oil using a clean cloth.
2. Lubricate all the sliding surfaces of the cylinder assembly
 - a. Push the ejector rod rearward and place a couple of drops of cleaner-lubricant-preservative or gun oil on the stem of the ratchet.
 - b. Holding the revolver vertical, with the muzzle up and cylinder open, place a couple of drops of cleaner-lubricant-preservative or gun oil on collar area of the cylinder and the ejector rod.
3. Lubricate the crane leg (Figure 19)
 - a. Using a properly sized screwdriver remove the crane lock screw, spring, and detent. Then place 3 to 4 drops cleaner-lubricant-preservative or gun oil into the hole and reassemble the crane lock, spring, and detent, tighten the screw firmly.
4. Cock the hammer and apply a few drops of cleaner-lubricant-preservative or gun oil to the internal components.

NOTE: Before use, pass a dry bore patch through the barrel to remove any excessive oil before firing the revolver.



Figure 15

LUBRICATION (Cont.)



Figure 16

LUBRICATION (Cont.)



Figure 17

LUBRICATION (Cont.)



Figure 18

LUBRICATION (Cont.)



Figure 19

CHAPTER 7- SIGHTS**FRONT SIGHT:**

The front sight is interchangeable (Figure 20). Optional sight configurations are available including tritium, brass bead, or fiber optic.



Make sure that your King Cobra Target Revolver is unloaded before changing the front sight.

To change the front sight, follow the instructions below:

1. Unloaded revolver pursuant to the instructions in Chapter 5.
2. Insert a .050" Allen wrench into the hole just above the muzzle of the barrel. Turn counter-clockwise to remove the #4-40 set screw.
3. After the front sight screw is removed, pull up on the front sight to remove it from the barrel.
4. Insert a new front sight into the front sight slot in the barrel.
5. Install the front sight screw and tighten it by turning it clockwise. Note: It is recommended to use a medium thread locker on the set screw to prevent it from loosening during shooting.

SIGHTS (Cont.)

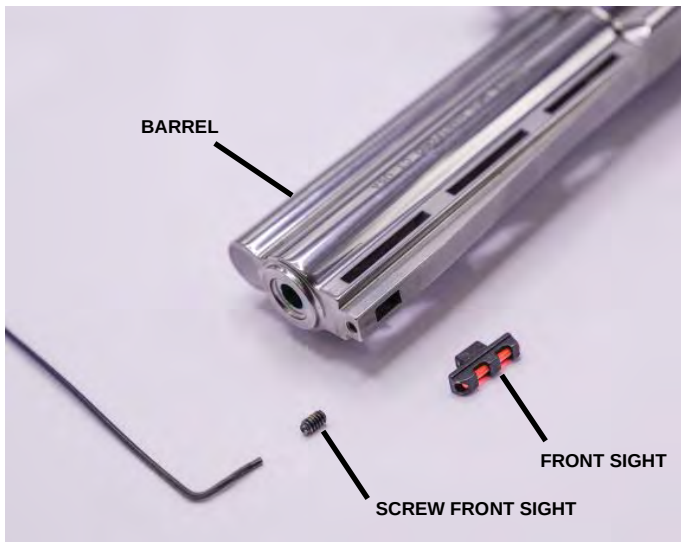



Figure 20

THE SIGHTS FURNISHED WITH YOUR REVOLVER MAY BE DIFFERENT DEPENDING ON YOUR MODEL

SIGHTS (Cont.)

REAR SIGHT

The rear sight is adjustable for elevation and windage (Figure 21).



WARNING Make sure that your King Cobra Target Revolver is unloaded before adjusting the rear sight for windage and/or elevation.

To adjust the elevation or windage on your unloaded King Cobra Target Revolver, follow the instructions below.

ELEVATION:

1. Turn the elevation screw clockwise to lower the point of impact or counterclockwise to raise the point of impact (Figure 21).
NOTE: Turning the elevation screw counterclockwise too many turns will disengage it from the frame and you could lose it during firing of the revolver.

WINDAGE:

1. Loosen the windage lock screw by turning it counterclockwise using a .050" Allen wrench.
2. Turn the windage screw clockwise to move point of impact left or counterclockwise to move point of impact right.
3. After final adjustment, tighten the windage lock screw by turning it clockwise with a .050" Allen wrench.

Note: While many sights operate in a similar manner to the methodology previously described, if your King Cobra Target Revolver is outfitted with optics or accessories other than those depicted in this section, you should follow the manufacturer's instructions for those optics or accessories.

SIGHTS (Cont.)

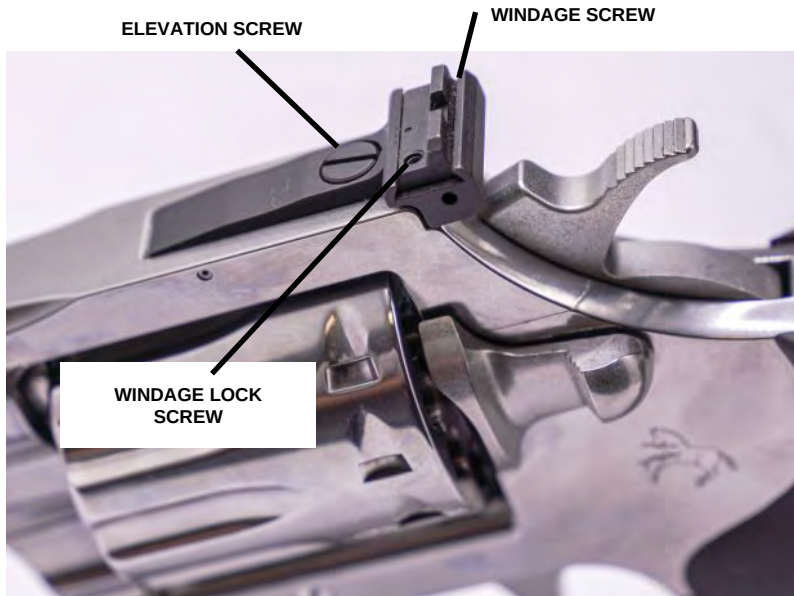





Figure 21

SAFETY DEPENDS ON YOU

STORAGE

 **WARNING** Always make sure your King Cobra Target Revolver is unloaded before storing it. Never store your King Cobra Target Revolver loaded.

 **WARNING** Always store your King Cobra Target Revolver unloaded and locked in a suitable container, out of the reach and sight of children or other unauthorized persons.

 **WARNING** Never store ammunition in the same container as your King Cobra Target Revolver.

To safely store your unloaded King Cobra Target Revolver, install a cable lock or trigger lock on it pursuant to the lock manufacturer's instructions. Store the unloaded and locked revolver in a safe or locked storage case, out of the reach and sight of children or other unauthorized persons, in a place where it will not become wet or be subjected to high temperatures.

Note: Various federal, state, and local laws may require that firearms be stored in a certain manner. Check with your state attorney general's office or state police to determine legal storage requirements in your jurisdiction.

SPARE PARTS

If you need spare parts for your King Cobra Target Revolver, contact Colt's customer service department. You can also contact your local federally licensed firearms dealer, who should have information on how to obtain genuine Colt parts.

REVOLVER SPECIFICATIONS

4.25" REVOLVER:

Caliber:	22 LR
Overall Length:	9.25 inches (23.50 cm)
Overall Height:	5.25 inches (13.34 cm)
Overall Width:	1.40 inches (3.56 cm)
Barrel Length:	4.25 inches (10.78 cm)
Rifling:	1 in 16 LH twist
Weight (unloaded):	34 oz. (.96 kg)
Capacity:	10 rounds

Note: Other models having different barrel lengths will have different specifications than those listed.

REVOLVER RECORD


Colt Model Number _____

Serial Number _____

Caliber _____

Purchased From _____

Date Purchased _____

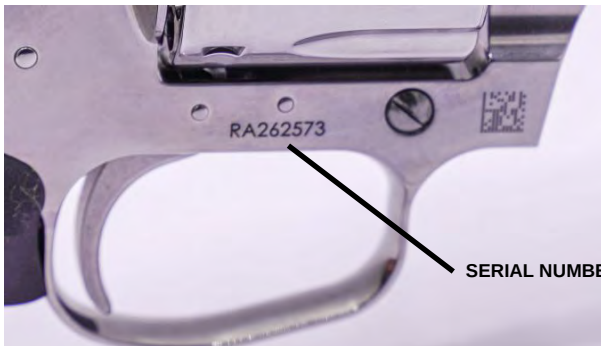

SERIAL NUMBER LOCATION

SERVICE AGREEMENT

Limited One Year Non-Transferable Product Warranty

Colt products will be serviced for defects in original factory materials or workmanship to the original purchaser at no charge for one year from the date of retail purchase from a Colt Stocking Dealer. Cosmetic blemishes and damage from normal wear and tear, abuse, neglect, improper ammunition, or to finishes/coatings are excluded. Be sure to retain your sales slip as proof when making a claim that you are the original purchaser, and of the purchase date and the Colt Stocking Dealer. This limited one year non-transferable warranty replaces all prior warranties or service agreements regardless of their terms or conditions.

This revolver was manufactured by Colt. The revolver was designed and built with an emphasis on reliability, accuracy, durability, and interchangeability of parts, rather than on cosmetic appearance. As a result, your revolver may have superficial blemishes on the exterior and color variation between parts. These minor imperfections are not defects.

If your revolver has a cosmetic finish, please keep in mind that these finishes are not armor. Sharp objects will scratch and mar them. So will exposure to harsh chemicals or conditions. We do not perform cosmetic corrections on revolver finishes. Expect your revolver's finish to develop its own blemishes through normal wear and tear, particularly to contact areas. These are not defects, but a reflection of your revolver taking on a personality of its own as an extension of you.

SAFETY DEPENDS ON YOU

NOTICE

Colt shall not be responsible for injury, death, or damage to property resulting from either intentional or accidental discharge of this revolver, or from its function when used for purposes or subjected to treatment for which it was not designed. Colt will not honor claims involving this revolver which result from careless or improper handling, unauthorized adjustment or parts replacement, corrosion, neglect, the use of wrong caliber ammunition, the use of ammunition other than high quality commercially manufactured ammunition in good condition, or any combination thereof. Colt will not honor claims involving this revolver for any reason or cause when such claims are made by the second or subsequent owner.

SERVICING AND REPAIR Should your revolver require adjustment or repair, contact Colt's Product Service Department, by telephone 1-800-962-COLT or by email at cs@colt.com. Product Service will provide an RMA and shipping instructions. Various federal, state and local laws govern the shipment and transportation of firearms and there may be special requirements to ship your revolver. Do not ship your revolver unless instructed to do so.

IMPORTANT: If you make unauthorized adjustments or use unauthorized parts in your revolver, Colt will not assume responsibility for the functioning of the revolver.

Note: This revolver is manufactured to perform properly with the original parts as designed. It is your duty to make sure any parts you buy are installed correctly and that neither replacements nor originals are altered or changed. That is why we strongly recommend that you have your revolver serviced by Colt. Assembling a revolver incorrectly or with modified parts can result in a damaged revolver, danger, and injury or death to you and others through malfunction. Always have a qualified gunsmith work on your revolver. Any work that you suspect was not performed by a gunsmith should be checked by a competent gunsmith or returned to Colt for inspection.

**SAFETY DEPENDS ON YOU
YOUTH HANDGUN SAFETY ACT NOTICE**

- (1) The misuse of handguns is a leading contributor to juvenile violence and fatalities.
- (2) Safely storing and securing firearms away from children will help prevent the unlawful possession of handguns by juveniles, stop accidents, and save lives.
- (3) Federal law prohibits, except in certain limited circumstances, anyone under 18 years of age from knowingly possessing a handgun, or any person from selling, delivering, or otherwise transferring a handgun to a person under 18.
- (4) A knowing violation of the prohibition against selling, delivering, or otherwise transferring a handgun to a person under the age of 18 is, under certain circumstances, punishable by up to 10 years in prison.

FEDERAL LAW

The Gun Control Act of 1968, 18 U.S.C. Chapter 44, provides in pertinent part as follows:

18 U.S.C. § 922(x)

(1) It shall be unlawful for a person to sell, deliver, or otherwise transfer to a person who the transferor knows or has reasonable cause to believe is a juvenile—

(A) a handgun; or

(B) ammunition that is suitable for use only in a handgun.

(2) It shall be unlawful for any person who is a juvenile to knowingly possess—

(A) a handgun; or

SAFETY DEPENDS ON YOU

(B) ammunition that is suitable for use only in a handgun.

(3) This subsection does not apply to—

(A) a temporary transfer of a handgun or ammunition to a juvenile or to the possession or use of a handgun or ammunition by a juvenile if the handgun and ammunition are possessed and used by the juvenile—

(i) in the course of employment, in the course of ranching or farming related to activities at the residence of the juvenile (or on property used for ranching or farming at which the juvenile, with the permission of the property owner or lessee, is performing activities related to the operation of the farm or ranch), target practice, hunting, or a course of instruction in the safe and lawful use of a handgun;

(ii) with the prior written consent of the juvenile's parent or guardian who is not prohibited by Federal, State, or local law from possessing a firearm, except—

(I) during transportation by the juvenile of an unloaded handgun in a locked container directly from the place of transfer to a place at which an activity described in clause (i) is to take place and transportation by the juvenile of that handgun, unloaded and in a locked container, directly from the place at which such an activity took place to the transferor; or

(II) with respect to ranching or farming activities as described in clause (i), a juvenile may possess and use a handgun or ammunition with the prior written approval of the juvenile's parent or legal guardian and at the direction of an adult who is not prohibited by Federal, State or local law from possessing a firearm;

(iii) the juvenile has the prior written consent in the juvenile's possession at all times when a handgun is in the possession of the juvenile; and

SAFETY DEPENDS ON YOU

(iv) in accordance with State and local law;

(B) a juvenile who is a member of the Armed Forces of the United States or the National Guard who possesses or is armed with a handgun in the line of duty;

(C) a transfer by inheritance of title (but not possession) of a handgun or ammunition to a juvenile;
or

(D) the possession of a handgun or ammunition by a juvenile taken in defense of the juvenile or other persons against an intruder into the residence of the juvenile or a residence in which the juvenile is an invited guest.

(4) A handgun or ammunition, the possession of which is transferred to a juvenile in circumstances in which the transferor is not in violation of this subsection shall not be subject to permanent confiscation by the Government if its possession by the juvenile subsequently becomes unlawful because of the conduct of the juvenile, but shall be returned to the lawful owner when such handgun or ammunition is no longer required by the Government for the purposes of investigation or prosecution.

(5) For purposes of this subsection, the term "juvenile" means a person who is less than 18 years of age.

(6) (A) In a prosecution of a violation of this subsection, the court shall require the presence of a juvenile defendant's parent or legal guardian at all proceedings.

(B) The court may use the contempt power to enforce subparagraph (A).

(C) The court may excuse attendance of a parent or legal guardian of a juvenile defendant at a proceeding in a prosecution of a violation of this subsection for good cause shown.

SAFETY DEPENDS ON YOU

18 U.S.C. § 924(a)(6)

(A) (i) A juvenile who violates section 922(x) shall be fined under this title, imprisoned not more than 1 year, or both, except that a juvenile described in clause (ii) shall be sentenced to probation on appropriate conditions and shall not be incarcerated unless the juvenile fails to comply with a condition of probation.

(ii) A juvenile is described in this clause if—

(I) the offense of which the juvenile is charged is possession of a handgun or ammunition in violation of section 922(x)(2); and

(II) the juvenile has not been convicted in any court of an offense (including an offense under section 922(x) or a similar State law, but not including any other offense consisting of conduct that if engaged in by an adult would not constitute an offense) or adjudicated as a juvenile delinquent for conduct that if engaged in by an adult would constitute an offense.

(B) A person other than a juvenile who knowingly violates section 922(x)—

(i) shall be fined under this title, imprisoned not more than 1 year, or both; and

(ii) if the person sold, delivered, or otherwise transferred a handgun or ammunition to a juvenile knowing or having reasonable cause to know that the juvenile intended to carry or otherwise possess or discharge or otherwise use the handgun or ammunition in the commission of a crime of violence, shall be fined under this title, imprisoned not more than 10 years, or both.

State and Local Required Warnings

Certain state and local governments require that their own warning notices be provided with firearms sold in that state or city. We therefore include the following notices:

CALIFORNIA:



WARNING:

"Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the Web site of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply.

Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison."



ADVERTENCIA

"Las armas de fuego deben manipularse de manera responsable y segura para evitar el acceso de niños y otros usuarios no autorizados. California tiene leyes estrictas relacionadas con armas de fuego, y usted puede ser multado o encarcelado si no las cumple. Visite el sitio web del Procurador General de California en <https://oag.ca.gov/firearms> para obtener información sobre las leyes de armas de fuego que le son aplicables y cómo puede cumplirlas. Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente, le pueden dar una multa o enviarlo a la cárcel."

SAFETY DEPENDS ON YOU



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



ADVERTENCIA

“Este producto puede exponerle a químicos incluyendo plomo, que son conocidos por el Estado de California como causantes de cáncer y defectos de nacimiento u otros daños reproductivos. Para mayor información, visite www.P65Warnings.ca.gov”

CONNECTICUT:

“UNLAWFUL STORAGE OF A LOADED FIREARM MAY RESULT IN IMPRISONMENT OR FINE.”

FLORIDA:

“IT IS UNLAWFUL, AND PUNISHABLE BY IMPRISONMENT AND FINE, FOR ANY ADULT TO STORE OR LEAVE A FIREARM IN ANY PLACE WITHIN THE REACH OR EASY ACCESS OF A MINOR UNDER 18 YEARS OF AGE OR TO KNOWINGLY SELL OR OTHERWISE TRANSFER OWNERSHIP OR POSSESSION OF A FIREARM TO A MINOR OR A PERSON OF UNSOUND MIND.”

MAINE:

“ENDANGERING THE WELFARE OF A CHILD IS A CRIME. IF YOU LEAVE A FIREARM AND AMMUNITION WITHIN EASY ACCESS OF A CHILD, YOU MAY BE SUBJECT TO FINE, IMPRISONMENT OR BOTH. KEEP FIREARMS AND AMMUNITION SEPARATE. KEEP FIREARMS AND AMMUNITION LOCKED UP. USE TRIGGER LOCKS.”

MARYLAND:

WARNING: "Children can operate firearms which may cause death or serious injury. It is a crime to store or leave a loaded firearm in any location where an individual knew or should have known that an unsupervised minor would gain access to the firearm. Store your firearm responsibly!"

MASSACHUSETTS:

"WARNING FROM THE MASSACHUSETTS ATTORNEY GENERAL: This handgun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds, or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventive steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths."

"IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER-RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER."

NEW JERSEY:

"IT IS A CRIMINAL OFFENSE TO LEAVE A LOADED FIREARM WITHIN EASY ACCESS OF A MINOR."

NEW YORK CITY:

"THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE FIREARM STORAGE. FOR INCREASED SAFETY, FIREARMS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATE FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND UNAUTHORIZED PERSONS."

NORTH CAROLINA:

"IT IS UNLAWFUL TO STORE OR LEAVE A FIREARM THAT CAN BE DISCHARGED IN A MANNER THAT A REASONABLE PERSON SHOULD KNOW IS ACCESSIBLE TO A MINOR."

TEXAS:

"IT IS UNLAWFUL TO STORE, TRANSPORT, OR ABANDON AN UNSECURED FIREARM IN A PLACE WHERE CHILDREN ARE LIKELY TO BE AND CAN OBTAIN ACCESS TO THE FIREARM."

WISCONSIN:

"IF YOU LEAVE A LOADED FIREARM WITHIN THE REACH OR EASY ACCESS OF A CHILD YOU MAY BE FINED OR IMPRISONED OR BOTH IF THE CHILD IMPROPERLY DISCHARGES, POSSESSES, OR EXHIBITS THE FIREARM."

State laws and regulations concerning firearms change constantly. Please check with your state attorney general's office or state police for additional laws and regulations regarding the storage and use of firearms in your state.

SAFETY DEPENDS ON YOU
NOTES

SAFETY DEPENDS ON YOU
NOTES

COPYRIGHT© 2025 COLT'S MANUFACTURING COMPANY LLC. ALL RIGHTS RESERVED



COLT, COLT (stylized "C"), and the Rampant Colt (design) are the exclusive property of Colt's Manufacturing Company LLC. Other trademarks used herein are owned by Colt's Manufacturing Company LLC or other entities. For permission to reprint for noncommercial instructional purposes, prior approval from Colt's Manufacturing Company LLC is required. Reprinting for commercial purposes is prohibited.